

Decorative wall

Motivo

Instruction for installation and use - short version

You have chosen Motivo decorative wall? Now you just have to install it. You can achieve the desired effect in two ways. It is really easy!

Installation using an adhesive

If the walls are even, choose quick installation with adhesive directly on the wall:


1. Use assembly adhesive for inside applications (you can buy at any DIY store).
2. Apply the adhesive on the panels making the "S" shape and fix the panel to the wall with its tongue on the left side.
3. Hold the panel for several seconds, then install next panel.

Installation on a frame

In case of uneven wall you first have to even the installation surface by building a wooden frame:

1. Build the frame from wooden trims by installing them directly on the wall.
2. Even the frames with a level, so they form an even surface.
3. Install the trims of the frames perpendicularly to the placement of the panels (if you place the panels vertically, the trims should be attached horizontally).
4. Keep the distance between the trims - 40 cm.
5. The easiest way to attach the panels to the frame is with a tackler. Attach them on the right side, behind the slot.

Regardless of the installation method it is important to place the panels in order from left to right. A single panel should be attached to the wall and the subsequent one should be placed with its tongue in the slot of the previous one. Look at the panels in both widths.

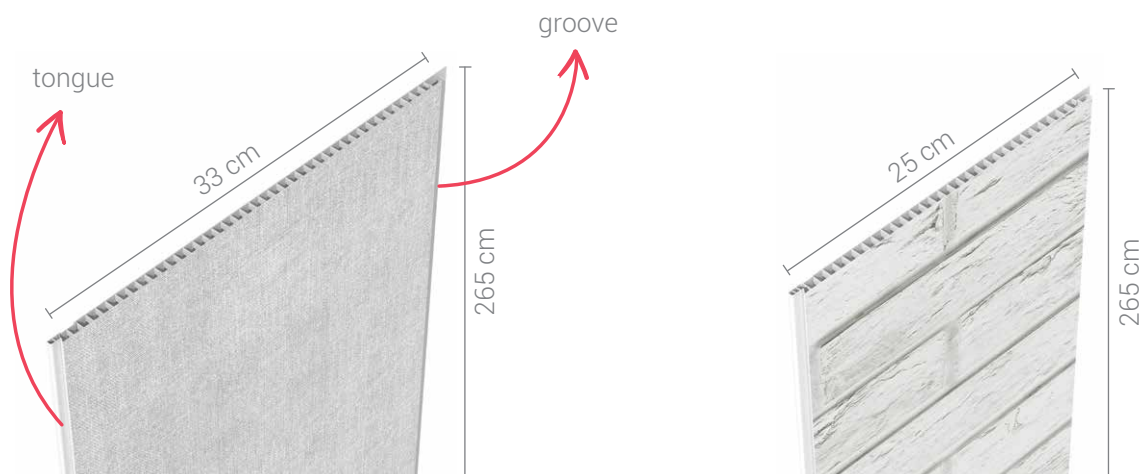

Also, remember the rules of installing panels. Pay attention to the pattern composition on your decorative wall

Panels marked with numbers

During the installation, attach the panels in proper order (1, 2, 3,...).



Panels are not numbered

The panels may be installed in any order.

